

GRIZZL≠E[™] EV charger

Version 2

User Manual & Installation Guide





Grizzl-E Manual

Grizzl-E Version 2: All units manufactured after June 15, 2021*. All Refurbished Units. Manual Revision: 1.4



Model Numbers:

Grizzl-E Classic:	Grizzl-E Avalanche Edition:	Grizzl-E Special Edition:	Grizzl-E Refurbished
GR1-6-18-XX	GR1-14-24-AW	GR1-14-24-PC	GR1-6-18-XX
GR1-6-24-XX	GR1-14-24-AB		GR1-6-24-XX
GR1-14-18-XX			GR1-14-18-XX
GR1-14-24-XX			GR1-14-24-XX
			GR1-14-24-PC

*Check the MFG Date on the label. If the MFG date is before June 15, 2021, see Version 1 Manual.



Grizzl-E Home EV Charging Station

The Grizzl-E is a simple, powerful, heavy-duty, and portable electric vehicle charging station made in Canada and built to withstand the harshest conditions. Grizzl-E comes in three different varieties Classic Black, Avalanche White, or Extreme Camo.

Grizzl-E comes with either a 18ft or 24ft Premium or Regular cable. Internal design and components of the charger have been selected to provide maximum operational life of the device and be able to withstand the elements.

Grizzl-E provides up to 10 KW of power to your vehicle. Physical switches inside can be set to provide 16 Amps, 24 Amps, 32Amps or 40 Amps adjustable maximum current.

IMPORTANT SAFETY INSTRUCTIONS

This document contains instructions and warnings that must be followed when installing and using the Grizzl-E Electric Vehicle Supply Equipment (EVSE). Before installing or using the EVSE, read this document including any WARNING and CAUTION symbols.

The Symbols Used Have the Following Meanings



Warning: risk of personal injury



Warning: risk of fire



Warning: risk of electric shock



Caution: risk of damage to equipment

- This document provides instructions for the charging station and should not be used for any other product. Before installation or use of this product, review this manual carefully and consult with a licensed contractor, licensed electrician, or trained installation expert to ensure compliance with local building codes and safety standards.
- Consult a licensed electrician to ensure that you can safely install and use this product.
- Ensure that the materials used, and the installation procedures, follow local building codes and safety standards.
- The information provided in this manual in no way exempts the user of responsibility to follow all applicable codes or safety standards.



Basic precautions should always be followed when using electrical products, including the following:

- Read all the instructions before using this product.
- Children should not use this device.
- Do not put fingers into the EV connector.
- Do not touch live electrical parts.
- Do not use this product if the flexible power cord or EV cable is ragged, has broken insulation, or any other signs of damage.
- Do not use this product if the enclosure or the EV connector is broken, cracked, open, or shows any other indication of damage.
- Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a licensed electrician if you are in doubt as to whether the product is properly connected and grounded.

Repair and Maintenance Clause

- All United Chargers products do not require routine maintenance however, periodic inspections should be conducted to ensure that all parts remain in good working order and no damage exists.
- Do not attempt to open, disassemble, repair, tamper with, or modify any components of the products. Contact United Chargers for any repairs.



WARNING: This equipment is intended only for charging vehicles that do not require ventilation during charging. Please refer to your vehicle's owner's manual to determine ventilation requirements.



Product Features

GRIZZL-E[™] Electric Vehicle Charging Station (EVSE)

- J1772 AC Level 2 (208-240 VAC), 40A Continuous Rated (9.6 kW)
- Adjustable Maximum Current Output (40A, 32A, 24A, 16A) to Support Multiple Circuit Ratings (50A, 40A, 30A, 20A)
- Extreme Duty, Rigid & Compact Design:
- Robust and heavy-duty aluminum cast case; airtight enclosure for indoor or outdoor use
- No user interface required with EVSE, simply Plug-in to your EV to initiate charging
- EasyEvPlug[™] Holster or Tesla EasyEVPlug[™] Holster with cable Management System.
- Plug-in Configuration for easy portability.
- Wall Mount with security features (including single stud mount), Pedestal, Bollard/Pole (Single & Dual Port) available from United Chargers.
- UL Listed.

Adjustable Maximum Current Output to Support Multiple Circuit Ratings

The GRIZZL-E[™] Electric Vehicle Charging Station features the ability to adjust the maximum charging station current output to allow the use of a 50A, 40A, 30A, or 20A Dedicated Circuit as follows:

50A Circuit Rating: 40A Circuit Rating: 30A Circuit Rating: 20A Circuit Rating: To support 40A (9.6kW) Maximum Charging Station Output To support 32A (7.68kW) Maximum Charging Station Output To support 24A (5.76kW) Maximum Charging Station Output To support 16A (3.84kW) Maximum Charging Station Output

The Default Factory Setting is 40A (9.6kW). To change the maximum current output, refer to Chapter 3. Adjustable Maximum Current Output on page 10. If you are unsure of the circuit ratings in your home consult a licensed electrician.

Security and Tamper Feature

In addition to the security pin that secures the GRIZZL-E charging station to the wall mount bracket, the GRIZZL-E Classic can also be used with a coupler lock and key with a length of 90mm and diameter of 7mm



Product Specifications

United Chargers GRIZZL-E[™] Electric Vehicle Charging Station (EVSE)

Description	Specifications
Model Numbers	 GR1-6-18-XX: GRIZZL-E[™] EVSE, 18 ft. J1772 Cordset, Plug-in: NEMA 6-50 Plug GR1-6-24-XX: GRIZZL-E[™] EVSE, 24 ft. J1772 Cordset, Plug-in: NEMA 6-50 Plug GR1-14-18-XX: GRIZZL-E[™] EVSE, 18 ft. J1772 Cordset, Plug-in: NEMA 14-50 Plug GR1-14-24-XX: GRIZZL-E[™] EVSE, 24 ft. J1772 Cordset, Plug-in: NEMA 14-50 Plug
EVSE Level	SAE J1772; AC Level 2
Max Output Rating	40A; 9.6 kW Maximum Output – For use with 50A Circuit Rating
Alternate Adjustable Output Ratings	32A; 7.68 kW Maximum Output – For use with 40A Circuit Rating 24A; 5.76 kW Maximum Output – For use with 30A Circuit Rating 16A; 3.84 kW Maximum Output – For use with 20A Circuit Rating
Charge Cable Lengths	18 ft. (5.5m) for GR1-6-18-XX and GR1-14-18-XX 24 ft. (7.2m) for GR1-6-24-XX and GR1-14-24-XX
Electrical Circuit / Input Power Requirements	Circuit Requirement: Dedicated Single Phase 208-240VAC, 50/60 Hz.; Branch Breaker: Double pole; Circuit Conductors: Line 1, Line 2, Earth / Ground
Input Power Connection	Standard: Plug-in, NEMA 6-50 or NEMA 14-50 Plug. Plug is removable for Hardwire Connection.
Installation Rating	NEMA 4, Indoor/Outdoor Rated
Operational Ratings	Temperature: -22ºF to 122ºF (-30ºC to 50ºC); Humidity: 95% RH non-condensing
Mounting	Wall or Pedestal Installation
Overall Dimensions	EVSE: 10.25 x 6.25 x 3.75 inches (26.0 x 16.0 x 9.3 cm)
Display & Indicators	LED Charge Status Indicators (Power/Ready, Charging, Fault)
Cable Management	EasyEvPlug™ with cable management
Standards & Compliance	UL certified



INSTRUCTIONS Manual

United Chargers GRIZZL-E [™] Smart Electric Vehicle Charging Station (EVSE)

Table of Contents

1. Introduction & Unpacking	8
2. Installation Planning and Service Wiring:	9
2.1 Electrical Source Requirements	9
2.2 Grounding Instructions	9
3. Adjustable Maximum Current Output	10
3.1 Adjust Maximum Current Output	10
3.2 Generation 1 Grizzl-E (3 DIP Switches)	11
3.3 Generation 2 Grizzl-E (4 DIP Switches)	13
4. Installation	15
4.1 Tools & Parts Required for Installation	15
4.2 Install the Charging Station	16
5. Input Wiring Connection (Optional Hardwire Connection)	
 Input Wiring Connection (Optional Hardwire Connection) EasyEvPlug Holster and Cable Management System 	19 21
5. Input Wiring Connection (Optional Hardwire Connection) 6. EasyEvPlug Holster and Cable Management System 7. Charging Status Indicators and Buzzers	19 21 22
 Input Wiring Connection (Optional Hardwire Connection) EasyEvPlug Holster and Cable Management System Charging Status Indicators and Buzzers 7.1 Indicator Lights 	19 21 22
 Input Wiring Connection (Optional Hardwire Connection) EasyEvPlug Holster and Cable Management System Charging Status Indicators and Buzzers 7.1 Indicator Lights 7.2 LED Fault Indicator 	19 21 22
 Input Wiring Connection (Optional Hardwire Connection) EasyEvPlug Holster and Cable Management System Charging Status Indicators and Buzzers 7.1 Indicator Lights 7.2 LED Fault Indicator 7.3 Reset Charger 	
 Input Wiring Connection (Optional Hardwire Connection) EasyEvPlug Holster and Cable Management System Charging Status Indicators and Buzzers 7.1 Indicator Lights 7.2 LED Fault Indicator 7.3 Reset Charger Operation 	
 Input Wiring Connection (Optional Hardwire Connection) EasyEvPlug Holster and Cable Management System. Charging Status Indicators and Buzzers 7.1 Indicator Lights 7.2 LED Fault Indicator 7.3 Reset Charger. 8. Operation 8.1 Connect and Charge 	
 Input Wiring Connection (Optional Hardwire Connection) EasyEvPlug Holster and Cable Management System. Charging Status Indicators and Buzzers 7.1 Indicator Lights 7.2 LED Fault Indicator 7.3 Reset Charger 8. Operation 8.1 Connect and Charge 8.2 Stop Charging . 	
 Input Wiring Connection (Optional Hardwire Connection) EasyEvPlug Holster and Cable Management System. Charging Status Indicators and Buzzers 7.1 Indicator Lights 7.2 LED Fault Indicator 7.3 Reset Charger 8. Operation 8.1 Connect and Charge 8.2 Stop Charging 9. General Product Care and Use Information 	



1. Introduction & Unpacking

This user manual applies to the GRIZZL-E[™] EVSE for Plug-in Hybrid Electric Vehicles (PHEVs) and Electric Vehicles (EVs).





2. Installation Planning and Service Wiring:



WARNING: Disconnect the power supply to the charging station before installing, adjusting, or repairing the charging. Failure to do so may result in physical injury or damage to the power supply system and the charging station.



CAUTION: To reduce the risk of fire, connect only to a circuit provided with the minimum branch circuit overcurrent protection requirements in accordance with the National Electrical Code ANSI/ NFPA 7- and the Canadian Electrical Safety Code, Part 1, C22.1. If you are unsure if your circuit meets these requirements consult a licensed electrician.

2.1 Electrical Source Requirements

- Prior to mounting, locate an available electrical source that can support the following Input Requirements for the Charging Station Per local Electrical Safety Code requirements:
 - » 40A Maximum Output Setting (Default Factory Setting): a DEDICATED CIRCUIT rated for 50A; 208-240 VAC, 50-60 Hz, Single Phase must be used.
 - » 32A Maximum Output Setting (Optional Setting): a DEDICATED CIRCUIT rated for 40A; 208-240 VAC, 50-60 Hz, Single Phase must be used.
 - » 24A Maximum Output Setting (Optional Setting): a DEDICATED CIRCUIT rated for 30A; 208-240 VAC, 50-60 Hz, Single Phase must be used.
 - » 16A Maximum Output Setting (Optional Setting): a DEDICATED CIRCUIT rated for 20A;
 208-240 VAC, 50-60 Hz, Single Phase must be used.
- A Double Pole Circuit Breaker of the circuit rating must be used.
- The Charger is equipped with GFCI. Additional downstream GFCI is not required. In locations where GFCI at the outlet is mandated by code, the charger will not experience negative effects.
- The Charging Stations can connect a Standard NEMA 6-50 or 14-50 Receptacle, or the unit can be hardwired.

2.2 Grounding Instructions

The charging station must be implemented equipment grounding through a permanent wiring system or an equipment grounding conductor. Use a cable with a dedicated grounding conductor connected to the equipment ground terminal block.



3. Adjustable Maximum Current Output

The GRIZZL-E [™] charging station features the ability to adjust the maximum Charging Station current output to support 50A, 40A, 30A, or 20A Dedicated Circuit ratings as follows:

Circuit Rating	Maximum Charging Station Output
50A	40A (9.6 kW)
40A	32A (7.68 kW)
30A	24A (5.76 kW)
20A	16A (3.84 kW)

- The Charging Station Default Factory Maximum Current Output Setting is 40A (9.6 kW) for use with a 50A Circuit Rating.
- The Circuit must be a DEDICATED CIRCUIT 208-240 VAC, 50-60 Hz, Single Phase.
- Requirements govern that only 80% of the circuit rated load may be utilized, hence the higher Circuit Ratings Requirement relative to maximum Charging Station output.

3.1 Adjust Maximum Current Output

To adjust the Maximum Current Output Setting:

- 1. Ensure unit is unplugged. Place the Charging Station on a flat surface with the front cover facing up.
- 2. Remove the front cover by removing the 4 screws at each corner of the charging station.







CAUTION: The LED pipe is attached to the front cover. When the front cover is removed, place it on a flat surface facing down to avoid damage to the LED pipe.

3.2 Generation 1 Grizzl-E (3 DIP Switches)

The Generation 1 Grizzl-E has 3 DIP switches located at the top left corner of the circuit board. If your Grizzl-E has 4 DIP Switches please see 3.3 Generation 2 Grizzl-E (4 DIP Switches) on page 15.

1. With the front cover placed to the side, locate the DIP switch on the charging station circuit board. The DIP switch is a 3-position switch on the main circuit board, located directly to the left of the LED.





WARNING: Do not touch live electrical parts. Disconnect the power supply to the charging station before adjusting the DIP Switches. Failure to do so may result in physical injury or damage to the power supply system and the charging station.



2. Using a non-conductive object adjust the Maximum Current Output to either 32A, 24A or 16A, using the following combination of DIP switch settings:

Maximum Current Output	DIP 1	DIP 2	DIP3	DIP Switch Setting (Picture)
40A Maximum Current Output (Factory Default Setting)	UP	DOWN	DOWN	
32A Maximum Current Output	UP	DOWN	UP	
24A Maximum Current Output	UP	UP	DOWN	
16A Maximum Current Output	UP	UP	UP	

3. Once the DIP Switch Setting is adjusted, reassemble the charging station. Reinstall the top cover to the charging station using the following torque force to secure the (4) socket cap screw:





3.3 Generation 2 Grizzl-E (4 DIP Switches)

The Generation 2 Grizzl-E has 4 DIP switches located at the top left corner of the circuit board.

1. With the front cover placed to the side, locate the DIP switch on the charging station circuit board. The DIP switch is a 4-position switch on the main circuit board, located directly to the left of the LED.





WARNING: Do not touch live electrical parts. Disconnect the power supply to the charging station before adjusting the DIP Switches. Failure to do so may result in physical injury or damage to the power supply system and the charging station.



2. Using a non-conductive object adjust the Maximum Current Output to either 32A, 24A or 16A, using the following combination of DIP switch settings:

	Switch 1	Switch 2	Switch 3	Switch 4	
40A Maximum Current Output (Factory Default Setting)	UP	UP	UP	DOWN	
32A Maximum Current Output	UP	DOWN	UP	DOWN	
24A Maximum Current Output	UP	UP	DOWN	DOWN	
16A Maximum Current Output	UP	DOWN	DOWN	DOWN	

3. Once the DIP Switch Setting is adjusted, reassemble the charging station. Reinstall the top cover to the charging station using the following torque force to secure the (4) socket cap screw:

Screw	Torque	
M6	16 kgf-cm	13.88 lb-in



4. Installation

4.1 Tools & Parts Required for Installation

Prior to mounting, determine the location of an acceptable mounting support. All charging station products must be anchored into a mounting support such as a $2'' \times 4''$ stud or a solid concrete wall. **DO NOT** mount this unit directly to a stucco/drywall/wall board.

ΤοοΙ	Size	Source of Supply	Description
Mounting Bracket	255 x148 x 36 mm	Included with Product	For mounting the charging station to the wall/structure
Socket cap screw (x4)	5/16"	Included with Product	For securing the charging station to the Mounting Bracket
Robertson-Head Screw (x2)	#14	Included with Product	For installing the Mounting Bracket to the wall/structure
Holster/Tesla Holster™	58 x 58 x 70 mm	Included with Product	To store the EV charging Plug and Cable
Phillips-Head Screw (x8)	#8	Included with Product	For installing the EasyEvPlug™ to the wall/ structure
Anchors (x8)	#8	Included with Product	For installing the EasyEvPlug™ to the wall/structure
Philips Screwdriver	PH3	Commercially Available	For Holder Installation and Optional Hardwire Install
Allen key	M4	Commercially Available	For Charging Station Cover Screws
Allen key	3/16"	Commercially Available	For installing the enclosure plate to the back of the station body.



4.2 Install the Charging Station

1. Separate the front and back piece of the mounting bracket by pushing down on the notch.



2. Attach the front piece of the mounting bracket to the back of the charging station using the Socket-cap screws. Ensure the top of the mounting bracket is matched with the top of the charging station.







3. Secure the back piece of the mounting bracket to the wall or other suitable structure using the Robertson-head screws.



The back piece of the mounting bracket has 3 holes to support attachment to various surfaces. Use the top two holes to attach the mounting bracket to a wall stud.

Mounting Screw Recommendations:

- For finished walls supported by wood studs, use #14 or M6 tapping screws. (Included).
- For masonry walls, use M6 mechanical screws. (Commercially available)
- Use following torque force:

Screw	Tor	que
M6	50 kgf-cm	43.4 lb-in
1/4″	50 kgf-cm	43.4 lb-in

Mount the unit between 24 inches (0.6 m) and 60 inches (1.5m) from the ground. The charging station should not be more that 18 inches away from the NEMA outlet. The NEMA outlet should be located no less than 20~26" from the ground or as defined by applicable, local electrical safety codes and standards.



4. Mount the charger on the wall by securing the front piece of the mounting bracket to the back piece of the mounting bracket.



- 5. Secure the charger in place by inserting either the security pin or the outdoor security lock into the mounting bracket.
- 6. Plug the power cord into the wall outlet.



5. Input Wiring Connection (Optional Hardwire Connection)

1. Choose the appropriate conduit in accordance with all applicable, local, and electrical safety codes and standards.



- 2. Using the appropriate tool, clamp the ring wire terminal to the copper wire. For noninsulated terminals, use heat shrink tube to cover the non-insulated portion of the terminal. Choose a terminal ring with the following characteristics:
 - » Recommended Wire Strip length: 8mm (0.32in)
 - » Width of the terminal block opening: 10.2mm (0.41in)



- Remove the front cover by removing the 4 screws at each corner of the charging station.
 For more information on how to remove the front cover refer to Chapter 3.1 Adjust Maximum Current Output on page 10.
- 4. With the front cover placed to the side, use Philips screwdriver to release terminal screws of the input cable. Loosen the Strain Relief Fitting for the 6-50 or 14-50 Plug and Remove the Plug. Remove the Strain Relief connector.
- 5. Insert the wire end passing through the conduit and insert them into the input wiring hole. (Use Red wire for L1, Black wire for L2, Green wire for G). Attach the copper wire on the corresponding terminal block. Use the following wire and torque force when connecting to input terminal block.



Terminal	Conductor	Screw	Rating	Torque
L1, L2, G	8 AWG (10AWG for ground)	M4	90C, copper wire	max 1.8Nm 16 LBF.IN



CAUTION: To reduce the risk of fire, connect only to a circuit provided with the appropriate amperes minimum branch circuit overcurrent protection in accordance with the National Electrical Code, ANSI/NFPA 70, and the Canadian Electrical Code, Part I, C22.1.

6. Once the input wiring and conduit are connected, reassemble the charging station. Reinstall the charging station font cover using the following torque force to secure the (4) screws:

Screw		Torque		
M4	m	ax 1.8Nm	16 LBF.IN	



6. EasyEvPlug Holster and Cable Management System

The EasyEVPlug[™] Holster or Tesla EasyEVPlug[™] Holster is the new innovative method to protect your plug and manage your cord. It has the following features:

- No need to aim flawless plug even in the dark.
- Your EV holster will always be in a convenient location.
- Saves space special angle for less wall clearance.
- Integrated cable management holds up to 25 feet of cable.

The EasyEvPlug holster can be installed at any location near the charging station.

 Hold back of holster against the mounting surface. Fasten Phillips head screws through back holes. Use anchors if attaching directly to drywall.







2. Insert charging connector into holster.

3. Wrap cable on top of EasyEvPlug.



7. Charging Status Indicators and Buzzers

7.1 Indicator Lights Grizzl-E uses the following indicator lights for the charger status:

LED Indicator	Buzzer	Description	Definition
	No buzzer	Not illuminated	Power Off
	No buzzer	White	Initialization
	No buzzer	Blue Steady	Ready
	No buzzer	Blue Flashing	Vehicle detected
	No buzzer	Green Flashing	Charging in progress
	No buzzer	Green Steady	Charging complete or no current consumed by the car
	Buzzer beeps	Red Flashing *	Fault

*See Chapter 7.2 LED Fault Indicator on page 23 to identify the type of fault.



7.2 LED Fault Indicator

The number of red flashes shows the type of fault:

LED Indicator	# of Flashes	Error Description
Red Flashing	1	Lost ground - AC Line1
Red Flashing	2	GFCI High Leakage
Red Flashing	3	Relay is stuck
Red Flashing	4	GFCI Low Leakage
Red Flashing	5	High temperature of the module
Red Flashing	6	High temperature of the relay-
Red Flashing	7	Pilot state is Status E
Red Flashing	8	Pilot state is Status F
Red Flashing	9	Diode error
Red Flashing	10	Over Current
Red Flashing	12	Application Error

7.3 Reset Charger

In the instance of a fault, it is recommended that you perform a reset:

- 1. Count the number of flashes as described above and record the error type.
- 2. Unplug the charging Connector from your EV
- 3. Turn off the power to the Charging Station by switching the upstream circuit breaker to the "OFF" position
- 4. With the circuit breaker in the "OFF" position, wait 1-2 minutes and then switch the upstream circuit breaker back to the "ON" position
- 5. Confirm the Fault light is no longer present.
- If the Fault light remains, please contact United Chargers. Download the <u>Technical Support</u> <u>Form</u> and send an email to techsupport@unitedchargers.com. Indicate the number of red flashes.



8. Operation

8.1 Connect and Charge

Insert the charging Connector into the EV and ensure the connector is fully seated/locked in place. Once complete, the charging session will begin.



8.2 Stop Charging

- 1. Unplug the charging station by pressing the connector button and removing the Charger Connector from the EV (once the connector button is depressed, the charging session terminates immediately).
- 2. Return the connector to the holster.



9. General Product Care and Use Information

The exterior of the charging station is designed to be waterproof and dust proof (NEMA 4 Outdoor Rated). However, periodic cleaning may be required, depending on local conditions. To ensure proper maintenance of the charging station, follow these guidelines:

- To avoid damaging the finish of the products, only use an automotive grade soft cleaning cloth with soap and water to remove accumulated dirt and dust. Do not use cleaning solvents to clean any of the product components.
- Despite the water resistance of the enclosure, submerging the unit in water is not recommended.
- The waterproof rating of the enclosure cannot be guaranteed if the charger is mounted upside down.
- Ensure the charging connector is put back in the holster after charging to avoid damage.
- Ensure the power cable is stored on the charging station after use to avoid damage.
- If the power cable or the charging connector is damaged, turn off the charging station supply circuit breaker, do not use the charging station, and Contact United Chargers Customer Support for replacement parts.
- When moving or lifting the unit, always grasp and carry by the charging station body. Never attempt to lift, move, or carry the unit by any of the electrical cables. Improper handling may cause damage to the unit.



10. Warranty and Return Policy

60 Day Product Return Policy

United Chargers accepts returns within 60 days from purchase in original unopened box only. In order to return the product please contact info@unitedchargers.com.

$\mathsf{GRIZZL}\text{-}\mathsf{E}^{\,\,\mathsf{M}}\,\mathsf{EV}\,\mathsf{Residential}\,\mathsf{Charging}\,\mathsf{Stations}\,\mathsf{3}\text{-}\mathsf{Year}\,\mathsf{or}\,\mathsf{5}\text{-}\mathsf{Year}\,\mathsf{Replacement}\,\mathsf{Warranty}.$

Grizzl-E comes with the option of a 3-year or 5-year manufacturer's warranty.

This warranty is extended by United Chargers to original purchasers of GRIZZL-E $\[mathbb{M}\]$ EV Charging Stations. United Chargers warrants that this product is free from defects in materials years and free from defects in workmanship for the period specified in the warranty from the date of purchase. No agent, employee, or representative of United Chargers has any authority to affirm, represent or warrant anything concerning GRIZZL-E $\[mathbb{M}\]$ EV Charging Stations, except for the affirmation and representation which is specifically included within this warranty.

This warranty will not apply if the product has been misused, abused, or altered. Warranty for the cable does not include normal tear and wear. Plugs that have been exposed to snow or water for a prolonged period of time are not covered by this warranty. The waterproof rating of the enclosure cannot be guaranteed if the charger is mounted upside down. The warranty will apply only if the product is defective. United Chargers assumes no liability for any dismantling, removal, installation, re-installation, or labor costs or any consequential damages associated with this warranty. United Chargers is not responsible or liable for any costs associated with faulty installations.

United Chargers shall make the final decision, in fairness to all concerned, as to the legitimacy of any such claim on this warranty. Upon discovery of any defective GRIZZL-E [™], please contact our Customer Service Department for further instructions as to how to repair or replace the defective unit or log into your account at www.grizzl-e.com and submit support ticket.

United Chargers Inc 90 Gough Road, Unit 2 Markham, Ontario L3R 5V5 Canada Phone: +1-833-840-4970 E-mail: info@unitedchargers.com Website: www.grizzl-e.com

The most up to date User Manual is available online at: https://grizzl-e.com/manuals/

Download the Technical Support Form: https://grizzl-e.com/wp-content/uploads/2021/03/United-Chargers-Technical-Support-Form.pdf And Send it to: info@unitedchargers.com